

WHI-PIGGYBACKFLOAT-V4 (802669)












INSTRUCTIONS FOR USE OF PIGGYBACK FLOAT

Please read before use.

For use in Rainwater tanks

- 1. Unwrap from packaging.
- Uncoil and lay out the float switch cable.
- 3. Choose a location on the roof of the rainwater tank to cut the 85mm hole required. The centre of the hole should be at least 200 mm away from the side of the tank as well as being 200mm away horizontally from tank rainwater entry and rain water tank outlet. Any shavings should be removed with a vacuum cleaner. Note: Ensure that the float does not foul on walls or fixtures of the tank.
- 4. Float switch should be positioned at least 100mm from the bottom of the rainwater tank.
- 5. Float switch cable is to be cable tied onto the PVC pipe work. Cable tie float cable 200mm from top of float switch. Cable tie should be installed so that the cable is not cut by the cable ties.
- 6. If a counterweight is used (not provided), it should be positioned 200mm from the top of the float switch.
- 7. The pump is to be plugged into the piggy back float switch.
- 8. The piggyback float switch is to be plugged into a 240V 10A GPO.

Typical installation with a surface mounted pump and Rainsaver. Note float arrangement

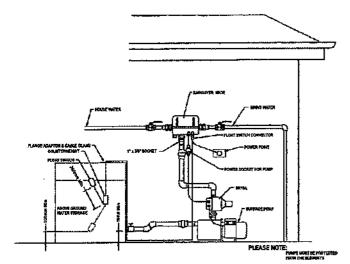

Other applications

- 1. Unwrap from packaging.
- 2. Uncoil and lay out the float switch cable
- Float switch should be positioned at least 100mm from the bottom of drum/tank/pit/storage vessel and at least 200mm from the sides of the drum/tank/pit/storage vessel.
- 4. The electrical device is to be plugged into the piggyback float.
- The piggyback float switch is to be plugged into a 240V 10A GPO.

Safety instructions

- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug do not pull on the cord.
- Do not use the piggyback float with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- This piggyback float is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the piggyback float by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the piggyback float
- Do not use the piggyback float for any purpose other than its intended use.
- Do not let the float cable hang over the edge of a table or bench top or touch any hot surface.
- Do not operate the piggyback float with a damaged cord or after the piggyback float has been damaged in any manner. If damage is suspected, return the piggyback float to your dealer or White International for examination, repair or adjustment.

Distributed By: White International Pty Ltd

Customer Service: 1300 783 601