





User Manual



Contents

Overview	3
Introduction	3
Main Components	4
Additional Functions	5
Specifications	5
Setup	6
Battery Installation	6
Clock	7
Scheduling	8
Start Time	8
Water Days	10
Run Time	11
Operation	12
Automatic Watering	12
Manual Watering	13
Maintenance	14
Cold Weather	14
Batteries	14
Other Precautions	14
Warranty	15

Overview

Introduction

The **K Dial Tap Timer** is made to be used in residential applications with normal household water pressures. Program your desired watering requirements before installing to your tap. Once set, your **K Dial** will repeat your programmed watering each week.

This instruction manual contains useful information on the proper use and care of this product. Please read through all instructions before attempting to program and use the *K Dial Tap Timer*. Please keep this user guide handy for future use.

Product code: KR5002



Overview

Main Components

- 1. 25mm BSP tap nut inlet
- 2. Display
- 3. Main dial
- 4. START ▶
- 5. **ZONE 2**
- 6. **+**
- 7. -

- 8. **ZONE 1** outlet, 20mm BSP
- 9. ZONE 2 outlet, 20mm BSP
- 10. 20/25mm BSP reducing bush
- 11. 12mm snap-on hose connectors
- 12. Battery compartment: requires 2× AAA alkaline batteries only (not included)



Overview

Additional Functions

- ▲ The display will return to the clock after 2 minutes of keypad or schedule inactivity
- A Removing the AAA batteries will reset all clock and schedule settings
- Using Zone 1+2 allows you to program an extra 4 start times for your *K Dial* to run. Once the watering duration has elapsed on Zone 1, it will automatically begin watering for Zone 2

Specifications

Daily scheduling	MON TUE WED THU FRI SAT SUN
Watering duration	1 min to 12 hr 59 min
Watering frequency	Any day
Working pressure	50-800 kPa
Maximum flow rate	25 L/min
Connections	25mm BSP inlet / 20mm BSP outlet
Working temperature	3°C to 50°C
Batteries	2× AAA alkaline (not included)

4 of 16 5 of 16

Setup

Battery Installation

Install 2× 1.5v AAA
 alkaline batteries into
 your **K Dial Tap Timer**,
 as indicated in the battery
 compartment [a]



After installing the batteries, the display should activate as follows if the main dial is set to OFF




- 2. The status of the battery power is shown by the battery icon
- ▲ Do not let the battery drop below 2 bars
- It is recommended to renew the batteries each spring, or at least once per year


Setup

Clock

- 1. To set the system time, turn the main dial to **CLOCK**
- The *minutes* will flash on the display [a]

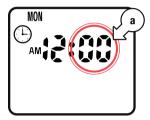

- 2. Press + or to adjust the *minutes* to the current time
- 3. Press **START** ▶ to save *minutes*
- 1 The *hours* will now flash [b]
- 4. Press + or to adjust the hours to the current time

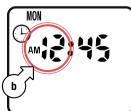

- Cycle through 12 hour periods to change AM/PM
- Press START ➤ to save hours
- **MON** will flash [c] to indicate days can be adjusted



- Press + or to cycle through and select the current day
- 7. Press **START** ▶ to confirm the current *day*
- The *minutes* will begin flashing, this is normal and the time has been saved
- 8. Main dial can be turned to **OFF**


6 of 16

Scheduling


Start Time

START TIME is the time a select zone will start watering


- Your K-Dial can use up to 4× different START TIMES per day per ZONE
- Turn the main dial to START TIME
- Press ZONE to cycle through and select ZONE 1, ZONE 2 or ZONE 1+2—the selected zone will be flashing on the display [a]

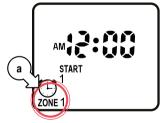

3. Press **START** ▶ to begin setting the **START TIME** for **START 1**—the *hours* will begin flashing [b]

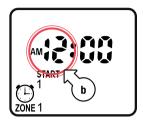

- 4. Press + or to adjust the *hours* as desired
- Press START ► to save—the *minutes* will begin flashing [c]

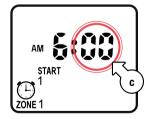


- 6. Press + or to adjust the *minutes* as desired
- 7. Press **START** ▶ to save the **START TIME**


Scheduling

Start Time (continued)

8. The current settings for the next **NEXT START** [d] will display as **OFF** [e] by default

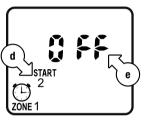


 Press START ► to begin setting the START TIME for-OFF (or the *hours*) will begin flashing [f]

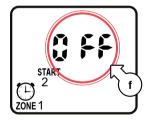

 Repeat steps 4-9 (page 8) to set START TIMES for START 2, START 3 and/or START 4 as desired

- To disable a START TIME again, hold down + and simultaneously. Selected start time will appear as OFF
- 11. [Optional] To set START TIMES for additional zones, press ZONE after saving the START TIMES the ZONE will flash [g] and revert back to START 1 [h]

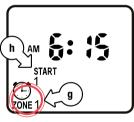

12. [Optional] To run an additional 4 start times for **ZONE 1** and **ZONE 2** (if watering both zones on the same day), set **START TIMES** for **ZONE 1+2** using steps 4-9. **ZONE 1+2** will water sequentially using the set **START TIMES**


8 of 16 SIAKI 4 as desired 9 of 16

Scheduling


Water Days

WATER DAYS are the days in which your *K Dial* will water at designated START TIMES for each ZONE

- A Check local regulations to determine watering days in your area
- Turn the main dial to
 WATER DAYS
- Press ZONE to cycle through and select ZONE 1 or ZONE 2—the selected zone will be flashing on the display [a]

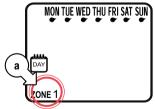

- By default, every day is toggled on as indicated by
- Press START ► to select each day–MON will flash first [b]

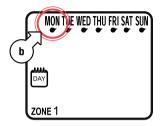


- 4. Press **→** or **→** to toggle watering *on* or *off* respectively
- When a day is toggled off the will disappear
- Press START ► to save the status and proceed to the next day
- 6. Repeat steps 4-5 until each day of the week has been set
- When saving the status for SUN, the display will automatically proceed to MON for the next zone
- WATER DAYS will be automatically applied if START TIMES are set for ZONE1+2.

Scheduling


Run Time

RUN TIME is the duration for which each zone will water

- The RUN TIME will be the same for all START TIMES. A different RUN TIME can be assigned to ZONE 1 and ZONE 2.
- Turn the main dial to RUN TIME
- RUN TIME settings start at ZONE 1
- **1 RUN TIME** is set to 30 minutes by default
- The duration minutes will be flashing [a]—press
 or to adjust the minutes as desired

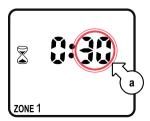

3. Press **START** ▶ to save—the *hours* will begin flashing [b]

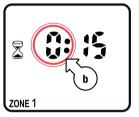

- 4. Press + or to adjust the *hours* to as desired
- 5. Press **ZONE C** to save the **RUN TIME** and proceed to the next zone
- Repeat steps 2-5 to set a RUN TIME for the next zone as desired
- To disable a RUN TIME, hold down + and simultaneously. Selected run time will appear as OFF
- The set RUN TIMES for ZONE 1 and ZONE 2 automatically applies to watering for ZONE1+2

Operation


Automatic Watering

For automatic watering, ensure the CLOCK, START TIME, WATER DAYS and RUN TIME have been set

- 1. Turn the main dial to ON
- The display will now show the current day, time and battery status. Watering will occur automatically on the selected WATER DAYS, at the designated START TIMES for the designated RUN TIMES
- When a START TIME is triggered, watering will begin, the display will show the remaining watering time [a], current zone being watered [b] and watering status with a watering sprinkler animation [c]
- If START TIME is set for ZONE 1+2, ZONE 2 will water sequentially after ZONE 1 is finished



- To suspend all automatic watering without losing settings, turn the main dial to **OFF**
- With the main dial switched to **OFF**, the display will show an *off* indicator [d]
- All watering schedules will run as planned if the main dial is not switched to OFF

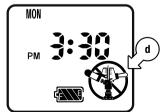


Operation

Manual Watering


Manual operation is for watering a zone immediately, this watering time is different to the pre-set schedules

- 1. For manual watering, turn the main dial to **ON**
- Press ZONE to choose to water ZONE 1, ZONE 2 or ZONE 1+2 [a]
- To manually water both zones sequentially, select ZONE 1+2. ZONE 2 will water after the set duration has finished on ZONE 1

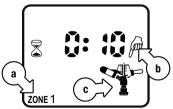

- The manual indicator [b] will display and the sprinkler icon [c] will be static. The default manual watering duration is 10 minutes [d]
- 3. Press + or to adjust the *minutes* to as desired

- Manual watering can only be set in *minutes* from 1 minute to a maximum of 99 minutes. Hold down
 when setting long watering times to scroll
- through the *minutes*4. To start watering session, press **START** ▶
- During watering, the time separator will flash [e], the sprinkler animation will start watering [f], and the duration will begin counting down [g]

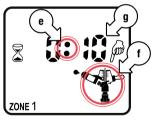

To stop watering immediately, turn the main dial to **OFF.** To ensure your pre-set schedules are active, turn the main dial back to **ON**.

Maintenance

Cold Weather

- Your K Dial Tap Timer should be removed from the tap and stored away during winter
- A Keep your tap timer out of freezing conditions as this can damage internal components

Batteries

- Remove batteries from your K Dial Tap Timer during periods of non-use—this will erase all settings
- Do not mix old and new batteries

- ▲ Do not use rechargeable batteries
- A Battery leakage can cause corrosion and damage to your K Dial Tap Timer

Other Precautions

- ▲ Do not use on tanks or other low pressure systems
- Use clean mains
 water only
- A Do not install horizontally



For support email info@k-rain.com.au or contact the friendly Customer Service team at Holman Industries on 08 9416 9999 Supplied and Serviced by Holman Industries





Warranty

2 Year Replacement Guarantee

Holman Industries offers a 2 year replacement guarantee with this product.

In Australia our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

As well as your statutory rights referred to above and any other rights and remedies you have under any other laws relating to your Holman product, we also provide you with a Holman guarantee.

Holman Industries guarantees this product against defects caused by faulty workmanship and materials for 2 years domestic use from the date of purchase. During this guarantee period Holman Industries will replace any defective product. Packaging and instructions may not be replaced unless faulty.

In the event of a product being replaced during the guarantee period, the guarantee on the replacement product will expire 2 years from the purchase date of the original product, not 2 years from the date of replacement.

To the extent permitted by law, this Holman Replacement Guarantee excludes liability for consequential loss or any other loss or damage caused to property of persons arising from any cause whatsoever. It also excludes defects caused by the product not being used in accordance with instructions, accidental damage, misuse, or being tampered with by unauthorised persons, excludes normal wear and tear and does not cover the cost of claiming under the warranty or transporting the goods to and from the place of purchase.

Should you suspect your product may be defective and need some clarification or advice please contact us directly:

1300 716 188

support@holmanindustries.com.au
11 Walters Drive,
Osborne Park 6017 WA

If you are certain your product is defective and is covered by the terms of this warranty, you will need to present your defective product and your purchase receipt as proof of purchase to the place you purchased it from, where the retailer will replace the product for you on our behalf.



14 of 16 **Product code: KR5002** 15 of 16



We really appreciate having you as a customer and would like to say thank you for choosing us.

We recommend registering your new product on our website. This will ensure we have a copy of your purchase and activate an extended warranty. Keep up to date to with relevant product information and special offers available through our newsletter.



Scan here, or visit k-rain.com.au/register for more info