 


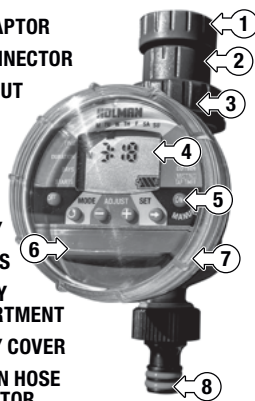

GLOSSARY

1. **TAP ADAPTOR**
2. **TAP CONNECTOR**
3. **UNION NUT**
4. **LCD DISPLAY**
5. **BUTTONS**
6. **BATTERY COMPARTMENT**
7. **DISPLAY COVER**
8. **SNAP-ON HOSE CONNECTOR**



INTRODUCTION

Thanks for purchasing our **Misting Tap Timer**. Please read the operating instructions carefully to familiarise yourself with the features and modes of operation before use.

MOUNTING TO TAP

1. Ensure the washer is in place
2. Screw the **TAP ADAPTOR** or **TAP CONNECTOR** onto the tap clockwise
 - 1 Hand tighten only
 - 1 There is no need for thread seal tape, so long as the tap seals onto the washer

PROGRAMMING EXAMPLE

This timer is designed to run a *misting* feature, meaning it can be programmed to a **START** and **STOP TIME**. For example, **START** at 6am and **STOP** at 6pm.

During this period, you can select the duration that watering is **ON** and the duration watering is **OFF**. For example, **ON** for 5 seconds, and **OFF** for 40 seconds.

With these selections made, the timer will water from the **START TIME** of 6am, **ON** for 5 seconds, turning **OFF** for 40 seconds, then back **ON** again for 5 seconds, continuing this pattern until the **STOP TIME** at 6pm.

 
This can be set to any weekday as required.

BATTERY INSTALLATION

1. Unscrew the **DISPLAY COVER**
 2. Hold the tap timer with the **BATTERY COMPARTMENT** facing you and
 3. Pull out the **BATTERY COMPARTMENT**
 4. Connect an **ALKALINE 9V BATTERY**
 5. Insert the connected battery and push in the battery tray
- 1 When changing the battery, make sure the **BATTERY COMPARTMENT** stays dry

SYSTEM CONTROLS

- 1 By default, the system shows the clock screen until any button is pressed
- 1 When setting times, use **+** to cycle through options, as indicated by flashing items

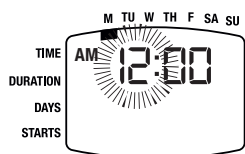

- 1 Use **+** or **-** to adjust any times accordingly

CURRENT TIME AND DAY

 
1. Press **+** to cycle through **HOURS**, **MINUTES** and **DAYS**
2. Use **+** and **-** to set the correct **HOURS**, **MINUTES** and **DAYS** ensuring AM/PM is correct



- 1 The **HOURS**, **MINUTES** or **DAYS** will flash as you cycle through to adjust them
- 3. Press **+** until time and day both stop flashing to save the set time


WATERING/MISTING DAYS

1. Press **+** to show the active watering days

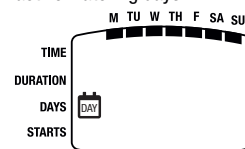

2. Use **+** and **-** to enable or disable watering days as desired
3. Press **+** to cycle through each day of the week
4. When finished, press **OFF** to return to the clock screen or press **+** to proceed to set the watering/misting **ON TIME**

 TIMING SYSTEM

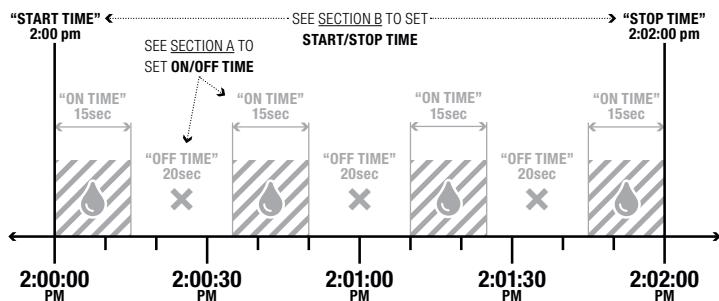

- 1 This tap timer runs on a cyclical **ON/OFF** pattern
- 1 **START/STOP TIMES** refer to the time of day at which the **ON/OFF** cycle starts and ends
- 1 **ON/OFF TIMES** are the duration which the tap timer watering is **ON** and **OFF** in the cycle

A: SETTING ON/OFF TIMES

- 1 **ON TIME** is the interval duration for which your timer will water or mist
 - 1 **OFF TIME** is the interval duration for which your timer will be switched off
1. Press **+** until the display shows **ON TIME** or **OFF TIME**
 2. Press **+** to cycle through **HOURS**, **MINUTES** and **SECONDS**
 3. Use **+** and **-** to set the correct **HOURS**, **MINUTES** and **SECONDS**
 4. When finished, press **OFF** to return to the clock screen or press **+** to proceed to set the **START TIME**

B: SETTING START/STOP TIMES

- 1 **START TIME** and **STOP TIME** are the times of day at which the watering/misting intervals will start and stop
1. Press **+** until the display shows **START TIME** or **STOP TIME**
 2. Press **+** to cycle through **HOURS** and **MINUTES**
 3. Use **+** and **-** to set the correct **HOURS** and **MINUTES**, ensuring AM/PM is correct
 4. When finished, press **OFF** to return to the clock screen

 
MANUAL OPERATION

- 1 For manual operation to work, an **ON TIME** must be pre-set as per the above instructions
1. Press **ON** to start watering/misting immediately
 - 1 The watering/misting duration will be the same as the **ON TIME** previously set
 2. Press **OFF** to stop watering/misting immediately as desired and return to the clock screen
- 1 This will not cancel any pre-set watering times

SUSPEND ALL OPERATIONS

- 1 All tap timer operations can be manually suspended, for example, during rain, without having to erase all pre-set watering times
1. Press **OFF** from the initial clock screen
 - 1 The word **OFF** will be displayed instead of the time—this will suspend all tap timer operations
 2. Press **OFF** again to resume all tap timer operations and return to the clock screen

LOW BATTERY WARNING

- 1 A low battery icon  will appear on the display when the battery is running low
- 1 At this point, the battery contains a limited amount of energy to show the display only
- 1 Time data will be retained for 30 seconds while changing the battery

MAINTENANCE

- 1 Remove batteries if the tap timer will not be used for a prolonged period of time
- 1 This unit contains an internal filter which must be removed and cleaned every few months

2 YEAR REPLACEMENT GUARANTEE

2 Year Guarantee

Holman offers a 2 year replacement guarantee with this product.

In Australia our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

As well as your statutory rights referred to above and any other rights and remedies you have under any other laws relating to your Holman product, we also provide you with a Holman guarantee.

Holman guarantees this product against defects caused by faulty workmanship and materials for 2 years domestic use from the date of purchase. During this guarantee period Holman will replace any defective product. Packaging and instructions may not be replaced unless faulty.

In the event of a product being replaced during the guarantee period, the guarantee on the replacement product will expire 2 years from the purchase date of the original product, not 2 years from the date of replacement.

To the extent permitted by law, this Holman Replacement Guarantee excludes liability for consequential loss or any other loss or damage caused to property of persons arising from any cause whatsoever. It also excludes defects caused by the product not being used in accordance with instructions, accidental damage, misuse, or being tampered with by unauthorised persons, excludes normal wear and tear and does not cover the cost of claiming under the warranty or transporting the goods to and from the place of purchase.

Should you suspect your product may be defective and need some clarification or advice please contact us directly:

1300 716 188
 services@holmanindustries.com.au
 11 Walters Drive, Osborne Park 6017 WA

If you are certain your product is defective and is covered by the terms of this warranty, you will need to present your defective product and your purchase receipt as proof of purchase to the place you purchased it from, where the retailer will replace the product for you on our behalf.

Thanks for being a **#SMARTGARDENER**



We hope you are happy with our product and if you have a moment to leave a review, we would like to hear your feedback on the Product Review website. www.productreview.com.au then search for our product name

We really appreciate having you as a customer, and would like to say thank you for choosing us. Should you have any questions about this product or its operation please call customer service on 1300 716 188



For the **#SMARTGARDENER**   

Head Office/Service
 11 Walters Drive, Osborne Park WA 6017
 Tel: +61 8 9416 9999 Fax: +61 8 9416 9920
service@holmanindustries.com.au
www.holmanindustries.com.au