# Ollo Inground Light Installation Instructions

		Product Specifications			Adequate Drainage
Model No.	HV19022T-CP	HV19022T-BLK	HV19022T-SS316	HV19042T-SS316	Slight decline on Ground level to
Name		allow for water to run away from fitti			
Material	316 Stainless Steel + Copper	316 Stainless Steel + Copper 316 Stainless Steel			
Colour	Face - Copper   Body - 316 Stainless Steel	Face - Black   Body - 316 Stainless Steel	316 Stai	316 Stainless Steel	
IP Rating		Light Fitting			
Input Voltage	12v DC		240V		
Protection Class	(Low Voltage)			(Requires Earth)	
Lamp Base	MR16			GU10	
Lamp Wattage	1x 5w			†Canister	
Colour Temp	TRI Colour - 3000k, 4000k, 5500k				100mm Space
Lumens	270lm, 285lm, 300lm				
CRI	> 80				
Wiring	Parallel				
Dimmable	No				100mm - 150mm
Warranty	3 Years Replacement*				of Crushed Rock

#### **Important Safety Issues:**

- This product must be installed by a qualified electrician according to AS/NZS 3000.
- Ensure all electrical mains are disconnected before any installation.
- Modification of this product will void any warranty.
- Havit Lighting does not take responsibility for wrong installation, incorrect use, or use of installation material that does not belong to the system.
- When installing low voltage fittings, Voltage to fitting must be within +or- 5% of voltage required, if not within this allowance warranty will be voided.
- Aluminium and 30455 fittings must not be installed within 5km of any salt water environments
- When installing copper fittings, gloves must be worn to avoid any oils transferring to fitting.
- · All 316 stainless steel fittings must have regular cleaning maintenance to avoid any tea staining from forming on fitting. (Warranty does not cover Tea Staining)
- All o-rings and seals must be in place correctly to maintain warranty
- This form may be updated at any time due to product improvements, please check online installation form for most current version.

#### Steps for Installation: HV19022T

- 1. Make sure that the electrical circuit is free of voltage (master switch off)
- 2. Make a hole where fitting is to be placed using dimensions provided on line drawings, making sure adequate drainage is allowed.
- 3. Insert canister, and ensure that the top is level with wall or ground. Failure to do so will void warranty.
- 4. Using an appropriate 12v DC LED Driver DO NOT CONNECT LIGHT FITTING DIRECTLY TO 240V
- 5. Connect the cable If more than one fitting installed, wiring must be done in parallel.
- 6. Strip back the cable on both fitting and cable run and twist the positive cables together. Then connect neutral cables together
- 7. Solder all joins using solder and either a heat gun or butane gas torch.
- 8. Cover connections using an adhesive lined heat shrink or gel cap to make connection watertight. Failure to do this will void warranty.
- 9. Heat the heat shrink or crimp the gel cap making sure all connections are covered.
- 10. Colour temperature is preset to 3000k, to change remove cover from fitting by twisting anti clockwise and set aside. Remove globe and select desired colour temperature by moving switch on side of globe and reinsert globesinto lampholder
- 11. Reattach glass and then cover by turning clockwise making sure the seals are still in place and cap is tight to avoid any water penetration.
- 12. Insert fitting into canister. Apply silicon around edge of fitting to prevent any water from getting inside to electrical connections.
- 13. All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.


### Steps for Installation: HV19042T

- 1. Make sure that the electrical circuit is free of voltage (master switch off)
- 2. Make a hole where fitting is to be placed using dimensions provided on line drawings, making sure adequate drainage is allowed.
- 3. Insert canister, and ensure that the top is level with wall or ground. Failure to do so will void warranty.
- 4. To connect the cable, strip back cable on both fitting and cable run and twist the earths together first, then positive cable from fitting to positive on the cable run. Then connect neutral from fitting to neutral on cable run.
- 5. Strip back the cable on both fitting and cable run, twist the earth cables together first, Then positive cables together and neutral cables together.
- Solder all joins using solder and either a heat gun or butane gas torch.
- 7. Cover connections using an adhesive lined heat shrink or gel cap to make connection watertight. Failure to do this will void warranty.
- 8. Heat the heat shrink or crimp the gel cap making sure all connections are covered.
- 9. Colour temperature is preset to 3000k, to change remove cover from fitting by twisting anti clockwise and set aside. Remove globe and select desired colour temperature by moving switch on side of globe and reinsert globe into lampholder
- 10. Reattach glass and then cover by turning clockwise making sure the seals are still in place and cap is tight to avoid any water penetration.
- 11. Insert fitting into canister. Apply silicon around edge of fitting to prevent any water from getting inside to electrical connections.
- 12. All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.

# Steps for Installation: HV190-HC Steps for Changing Globe: 1. Remove cover and glass and set aside I. 2. Insert Honeycomb lens on the inside of the glass I. 3. Reattach glass and then cover by turning clockwise making sure the seals are still in place and cap is tight to avoid any water penetration. I. Remove the cover by twisting anti-clockwise then glass and set aside, remove globe by pulling gently. 2. Re-insert the appropriate globe by aligning the 2 pins of the globes into the lampholder and pushing down gently until fimly in place. (Make sure not to exceed max wattage, see product label for correct info) 3. Reattach cover by turning clockwise making sure the penetration.

## Must be installed by a licensed electrician

<b>Contact Details:</b>		Warranty Terms & Conditions*	Additional Information			
143 Beauchamp Road Matraville NSW 2036 Australia	Tel: 02 9381 8300 Fax: 02 9666 8881 Email: sales@havit.com.au Web: www.havit.com.au					

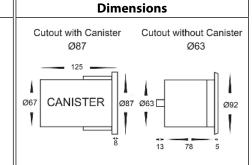

*⊾ H*a√n